

Installation Instructions:

- 1. Locate the Oil Filter:** Position the vehicle securely and find the existing oil filter in the engine compartment.
- 2. Remove the Old Filter:** Carefully remove the old oil filter by turning it counterclockwise. Ensure to have a container ready to catch any oil spillage.
- 3. Prepare the New Filter:** Before installing, apply a small amount of clean engine oil to the gasket of the new oil filter.
- 4. Install the New Filter:** Screw the new oil filter onto the engine by turning it clockwise until snug. Avoid overtightening.
- 5. Check Oil Level:** After installation, check the engine oil level and top it off if necessary.