Part Number: PT276-C1200-02

Kit Contents

Item #	Quantity Reqd.	Description
1	4	Wheel Lock
2	1	Key
3		

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1	1	Pouch (PT276-34190)

Conflicts

None

Recommended Tools

Personal & Vehicle Protection	**Notes**
Safety Glasses	
Special Tools	**Notes**
None	
Installation Tools	**Notes**
Socket	17mm Deep Socket
Extension	3” extension
Torque Wrench	Dial type or Digital (0-140N·m)
Wire Brush	
Special Chemicals	**Notes**
None	

General Applicability

MY20 and newer Supra model with factory alloy wheels

Recommended Sequence of Application

Item #	Accessory
1	
2	
3	

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

Legend

STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.

OPERATOR SAFETY: Use caution to avoid risk of injury.

CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.

REVISION MARK: This mark highlights a change in installation with respect to previous issue.

SAFETY TORQUE: This mark indicates that torque is related to safety.

REGULATORY MARK: This mark indicates the component is related to regulatory compliance

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

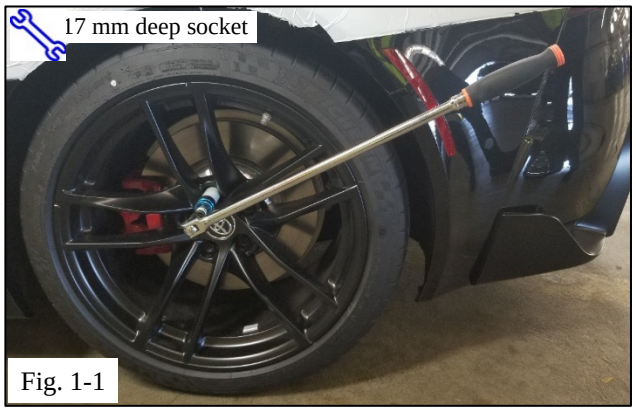


Fig. 1-1


Fig. 2-1

1. Remove One Lug Nut.

(a) Remove one lug bolt from each wheel (Fig. 1-1) and discard according to local scrap/recycle regulations.

2. Install the Wheel Lock.

CAUTION: DO NOT USE IMPACT WRENCH TO INSTALL OR REMOVE WHEEL LOCKS.

(a) By hand, install a wheel lock on each wheel.

(b) Take the key supplied in the wheel lock set. Place it on top of the wheel lock and turn until the patterns engage (Fig. 2-1).


Fig. 2-2

(c) Take the key supplied in the wheel lock set and place it on top of the wheel lock. Turn the key until the patterns engage (Fig. 2-2).

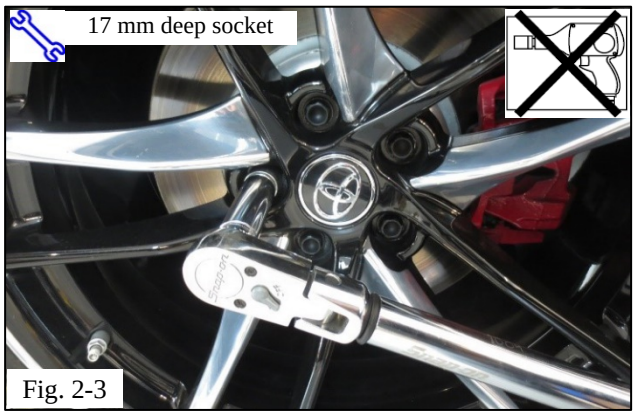


Fig. 2-3

(d) Place the socket on top of the key. Apply pressure on the key, and using a torque wrench, tighten the wheel locks to 140 N·m (103 ft·lbf) (Fig. 2-3).

CAUTION: DO NOT USE IMPACT WRENCH TO INSTALL OR REMOVE WHEEL LOCKS.

Torque: 140 N·m (103 ft·lbf)

(e) Perform torque audit**.**

Torque: 140 N·m (103 ft·lbf)

3. Store the Key.


Fig. 3-1

(a) Place the key in the key pouch (PT276-34190) and store in the glove box (Fig. 3-1).

4. Complete the Installation.

(a) Remove lock I.D. card, wheel lock installation instructions and self-address envelop from the clam shell and place them in the glove compartment.

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:	Look For:
Accessory Function Checks	
☐ Correct part number has been installed	Verify part number on package
☐ Perform torque audit check	**Torque: 140 N·m (103 ft·lbf)** Complete the torque audit sheet
☐ Key Placement	Place pouch with key, lock I.D. card, wheel lock installation instructions and self-address envelop in the glove compartment.
Vehicle Appearance Check	
☐ After accessory installation and removal of protective cover(s), perform a visual inspection.	Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)