Part Number: PT347-42190

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Spider Net

Hardware Bag Contents

Item #	Quantity Reqd.	Description

Additional Items Required For Installation

Item #	Quantity Reqd.	Description

Conflicts

None

Recommended Tools

Personal & Vehicle Protection	**Notes**
None	
Special Tools	**Notes**
None	
Installation Tools	**Notes**
None	
Special Chemicals	**Notes**
None	

General Applicability

MY19 and newer RAV4, RAV4-HV and Prime models

Recommended Sequence of Application

Item #	Accessory

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description

Legend

STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.

OPERATOR SAFETY: Use caution to avoid risk of injury.


CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.

REVISION MARK: This mark highlights a change in installation with respect to previous issue.

SAFETY TORQUE: This mark indicates that torque is related to safety.

REGULATORY MARK: This mark indicates the component is related to regulatory compliance

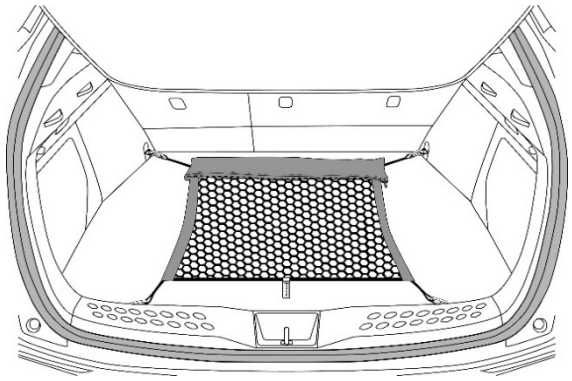

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.


These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-
• Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
• Safety (eye protection, rechecking torque procedure, etc.).
• Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
• Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).


Please see your Lexus dealer for a copy of this document.

1


Zipper on left-hand side

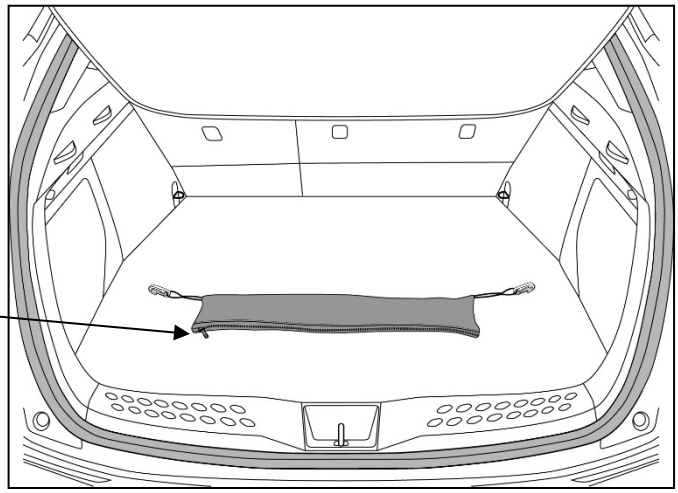


2

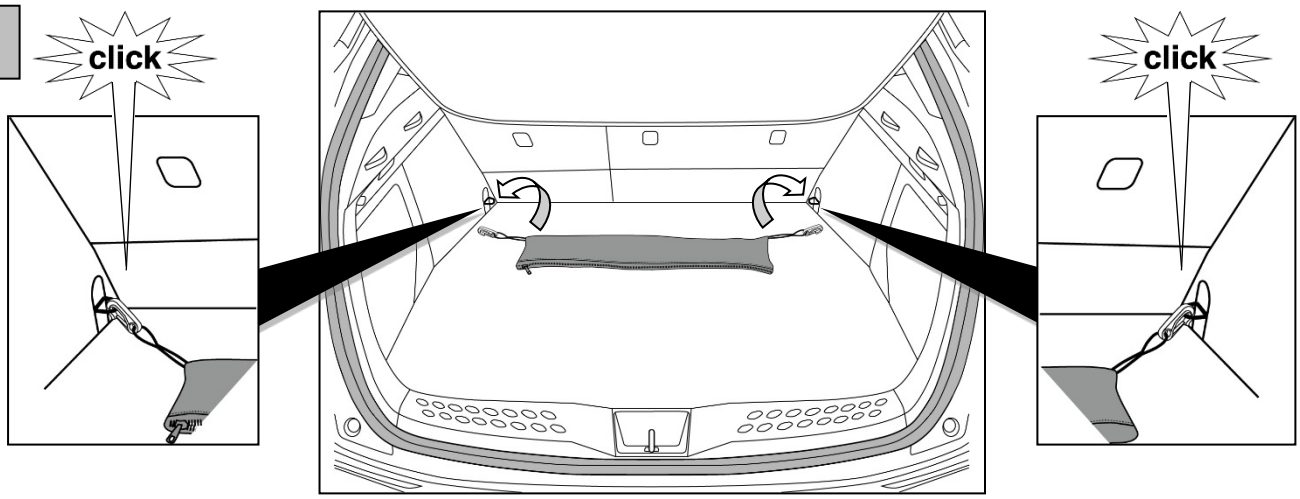


3

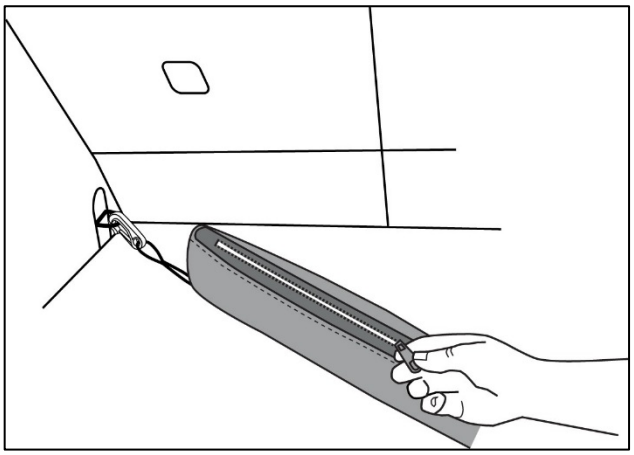

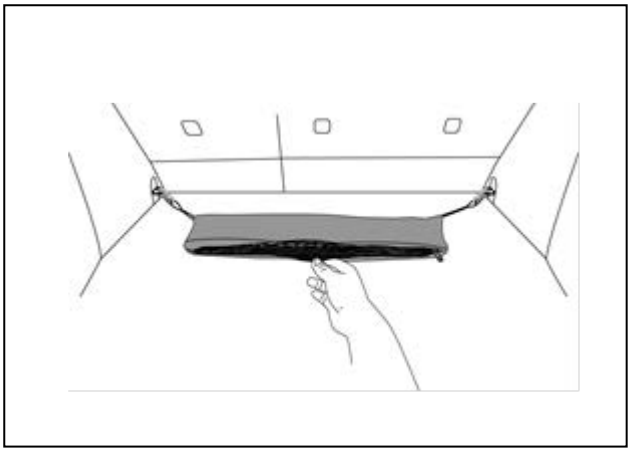

4

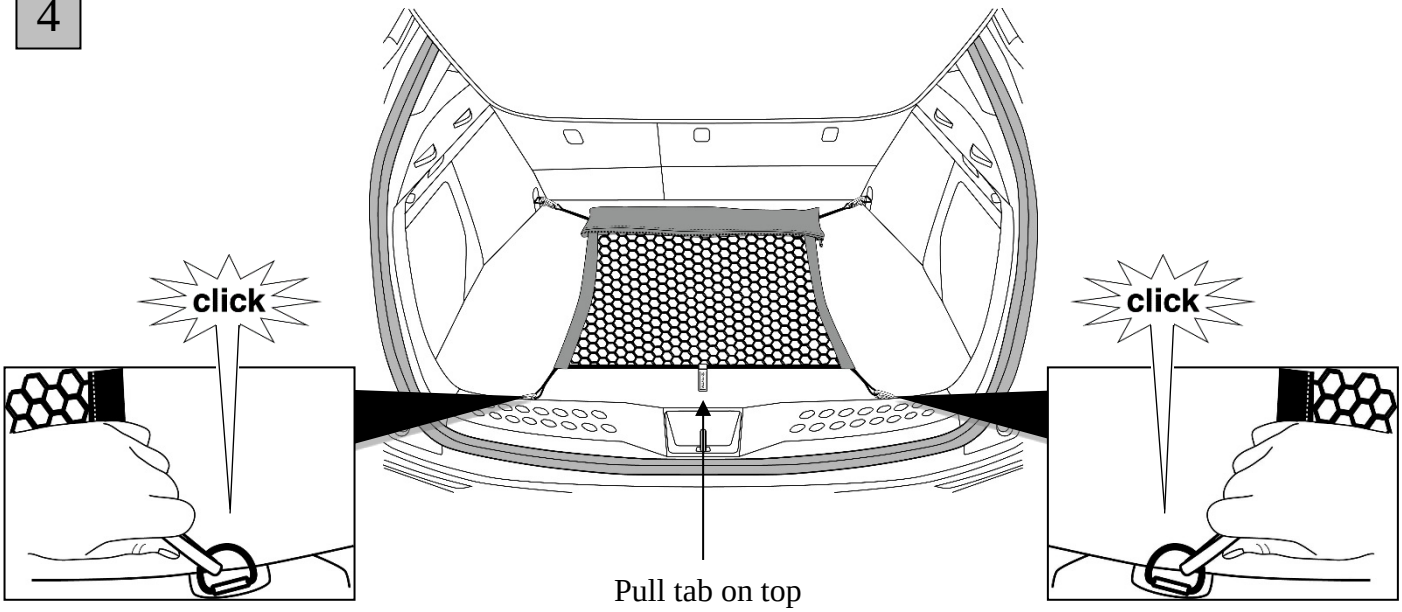

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:	Look For:
Accessory Function Checks	
☐ Confirm that the net is attached properly to the anchor points in the vehicle.	Confirm the pull tab is facing toward the rear of the vehicle. Confirm all clips are properly attached to the D-rings of the vehicle.
Vehicle Function Checks	
☐ Verify hatch door operation.	Confirm vehicle hatch door opens and closes without interference from the cargo net.
Vehicle Appearance Check	
☐ After accessory installation and removal of protective cover(s), perform a visual inspection.	Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)