Part Number: PT912-16220-02

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Cargo Cover

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description

Hardware Bag Contents

Item #	Quantity Reqd.	Description

Legend

STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.

OPERATOR SAFETY: Use caution to avoid risk of injury.

CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.

REVISION MARK: This mark highlights a change in installation with respect to previous issue.

SAFETY TORQUE: This mark indicates that torque is related to safety.

REGULATORY MARK: This mark indicates the component is related to regulatory compliance

Additional Items Required For Installation

Item #	Quantity Reqd.	Description

Conflicts

None

Recommended Tools

Personal & Vehicle Protection	**Notes**
Special Tools	**Notes**
Installation Tools	**Notes**
Special Chemicals	**Notes**

General Applicability

MY22 and newer Corolla Cross models

Recommended Sequence of Application

Item #	Accessory

*Mandatory

Issue: A 04/07/2021

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

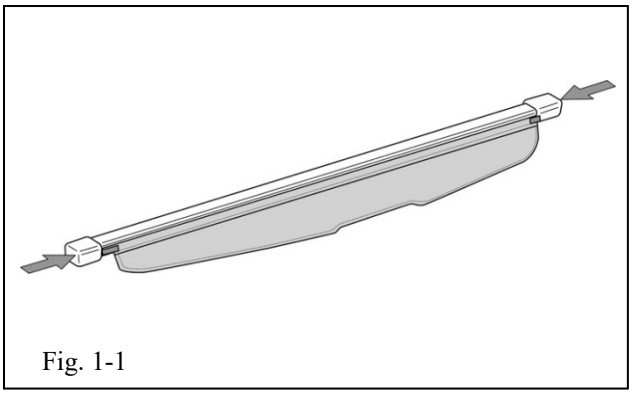


Fig. 1-1

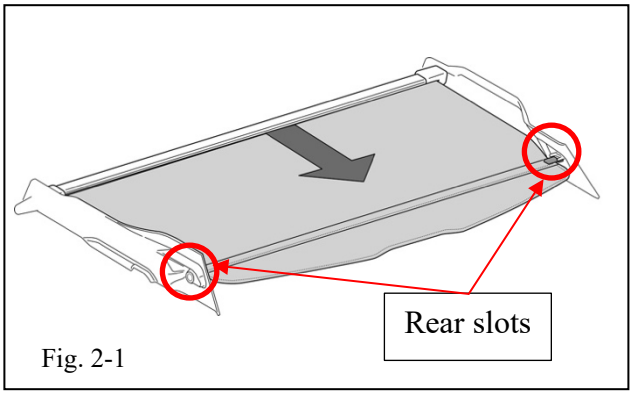


Fig. 2-1

1. Compress the Ends

(a) Compress the spring loaded ends inward and engage the Cargo Cover into the slotted positions on driver and passenger side behind upper portion of rear seats (Fig. 1-1).

2. Extend Cargo Cover

(a) Extend Cargo Cover and lock into rear most slots as shown (Fig. 2-1).

Issue: A 04/07/2021

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:	Look For:
Accessory Function Checks	
☐ Verify parts:	Removed items have been discarded & replaced items are in place
☐	
☐	
☐	
Vehicle Function Checks	
☐	
☐	
☐	
Vehicle Appearance Check	
☐ After accessory installation and removal of protective cover(s), perform a visual inspection.	Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMNA Accessory Quality Shipping Standard.)

Issue: A 04/07/2021