Part Number: PT347-0C080

NOTE: Part number of this accessory may not be the same as the part number shown.

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Convenience Net
2	1	Installation Instructions

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		

Conflicts

None

Recommended Tools

Personal & Vehicle Protection	Notes
None	
Special Tools	**Notes**
None	
Installation Tools	**Notes**
None	
Special Chemicals	**Notes**
None	

General Applicability

MY08 and newer Sequoia and Sequoia HV models

Recommended Sequence of Application

Item #	Accessory
1	

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

Legend

STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.

OPERATOR SAFETY: Use caution to avoid risk of injury.

CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.

REVISION MARK: This mark highlights a change in installation with respect to previous issue.

SAFETY TORQUE: This mark indicates that torque is related to safety.

REGULATORY MARK: This mark indicates the component is related to regulatory compliance

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

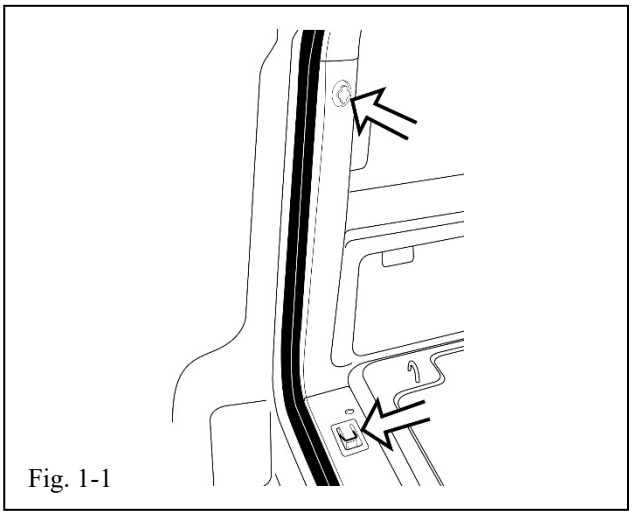


Fig. 1-1

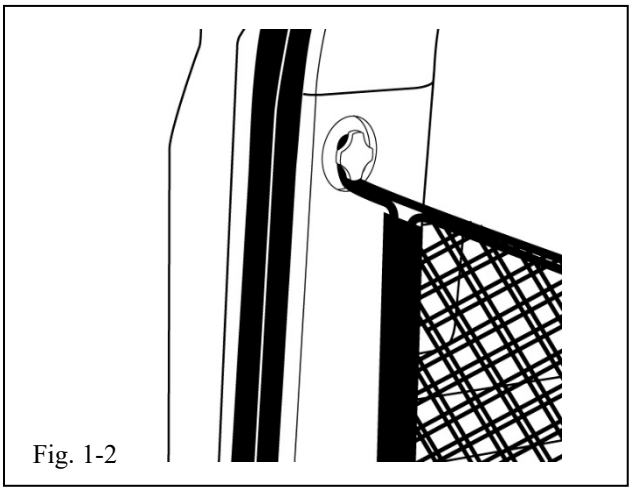


Fig. 1-2

1. Installation of Cargo Net

(a) Starting on the driver's side of the vehicle, locate the anchor points in the cargo area as shown (Fig 1-1).

(b) Attach the loop at the top of the net to the vehicle hook as shown (Fig 1-2).

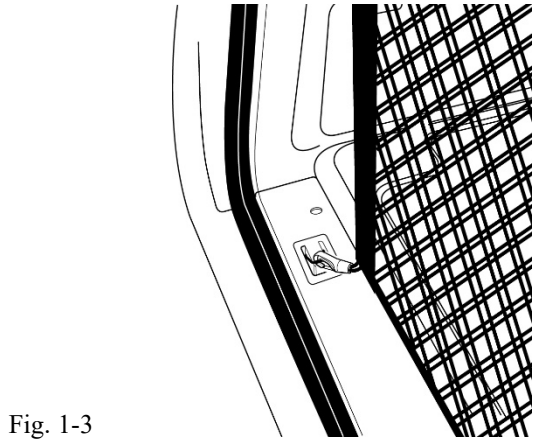


Fig. 1-3

(c) Attach the hook at the bottom of the net to the vehicle hook as shown (Fig 1-3).

(d) Attachment complete on the driver's side. Repeat step 1(a) through 1(c) for the passenger's side of the vehicle.

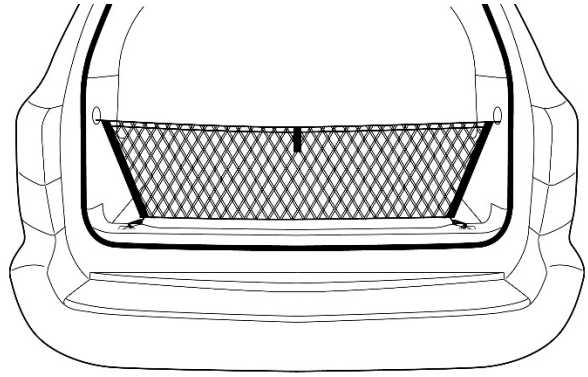


Fig. 1-4

(e) Completed assembly. Make sure handle is facing outward toward the rear of the vehicle (Fig 1-4).

Check:	Look For:
Accessory Function Checks	
☐ Confirm that the net is attached properly to the anchor points in the vehicle.	Loops are attached to the anchors at the top. Hooks are attached to lower D-rings.