Part Number: PT347-30230

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Convenience Net
2	1	Hardware Bag

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1	2	T-Anchors
2	2	Panel Nuts

Additional Items Required For Installation

Item #	Quantity Reqd.	Description

Conflicts

Recommended Tools

Personal & Vehicle Protection	**Notes**
None	
Special Tools	**Notes**
Plastic Pry Tool	For cargo area disassembly
Installation Tools	**Notes**
None	
Special Chemicals	**Notes**
None	

General Applicability

All Grades

Recommended Sequence of Application

Item #	Accessory

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1	1	Hardware Bag

Legend

STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.

OPERATOR SAFETY: Use caution to avoid risk of injury.


CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.

REVISION MARK: This mark highlights a change in installation with respect to previous issue.

SAFETY TORQUE: This mark indicates that torque is related to safety.

REGULATORY MARK: This mark indicates the component is related to regulatory compliance

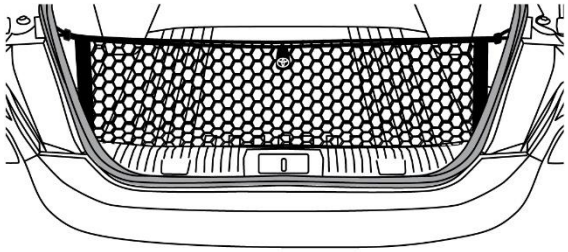


Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.


This document covers such items as:-
• Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
• Safety (eye protection, rechecking torque procedure, etc.).
• Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
• Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).
Please see your Toyota dealer for a copy of this document.

© 2025 Toyota Motor Sales, USA

1

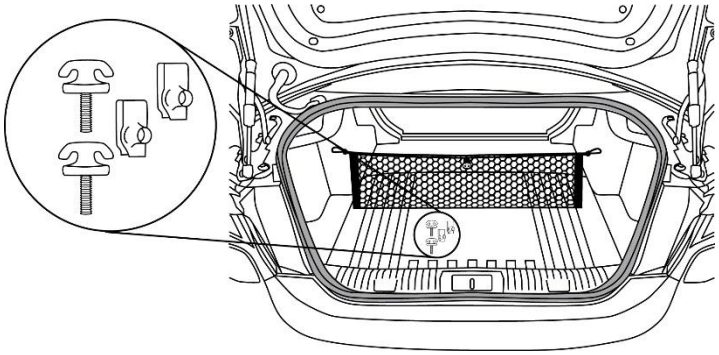


2

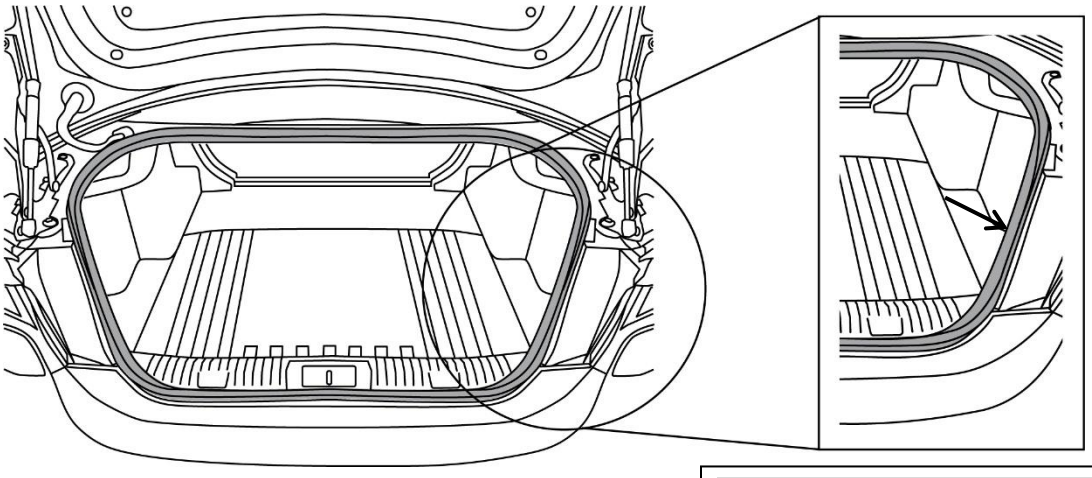


Remove 2 clips per side

3

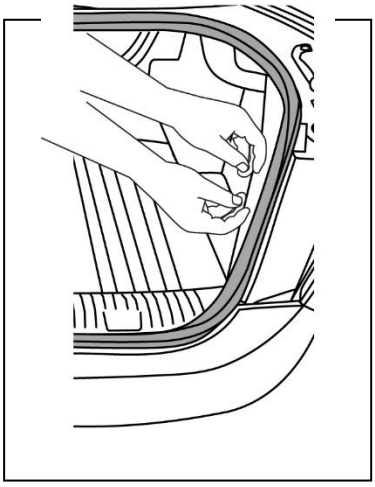

Pull Back Panel

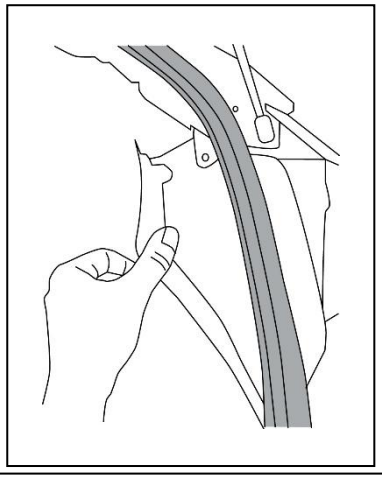


Locate Tab


© 2025 Toyota Motor Sales, USA

4


a

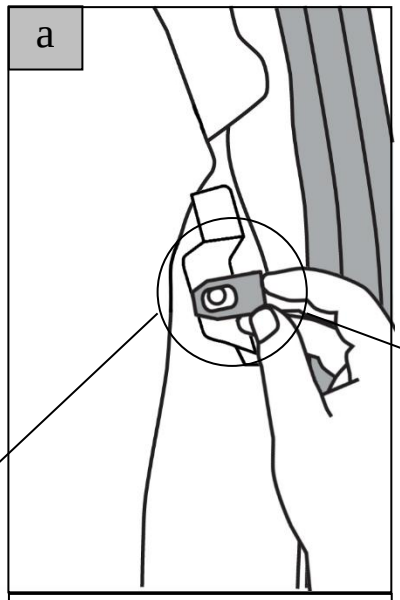


Install Panel Clip on Tab

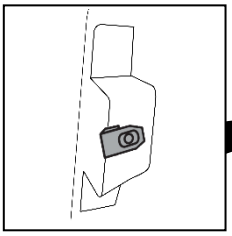

Driver Side Orientation

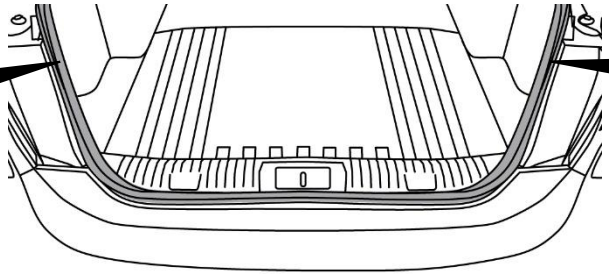

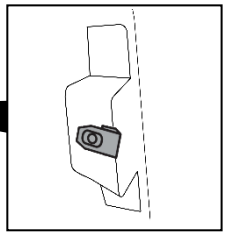


Passenger Side Orientation

5




Replace Trim and Dispose of extra clips

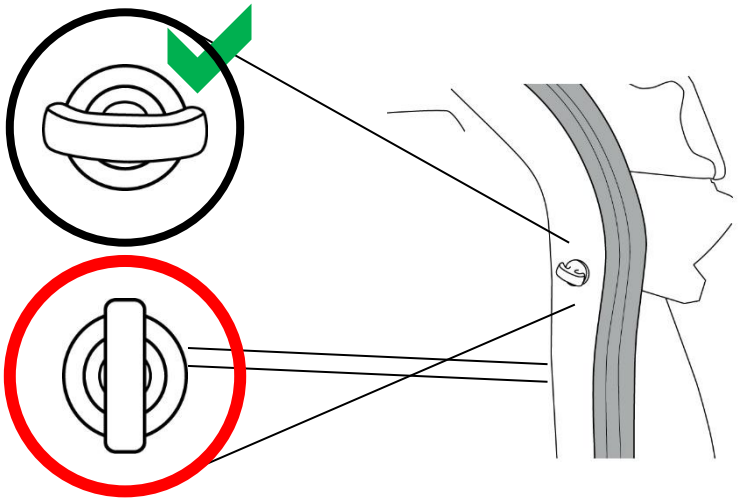


Insert Anchor into Trim

© 2025 Toyota Motor Sales, USA

6

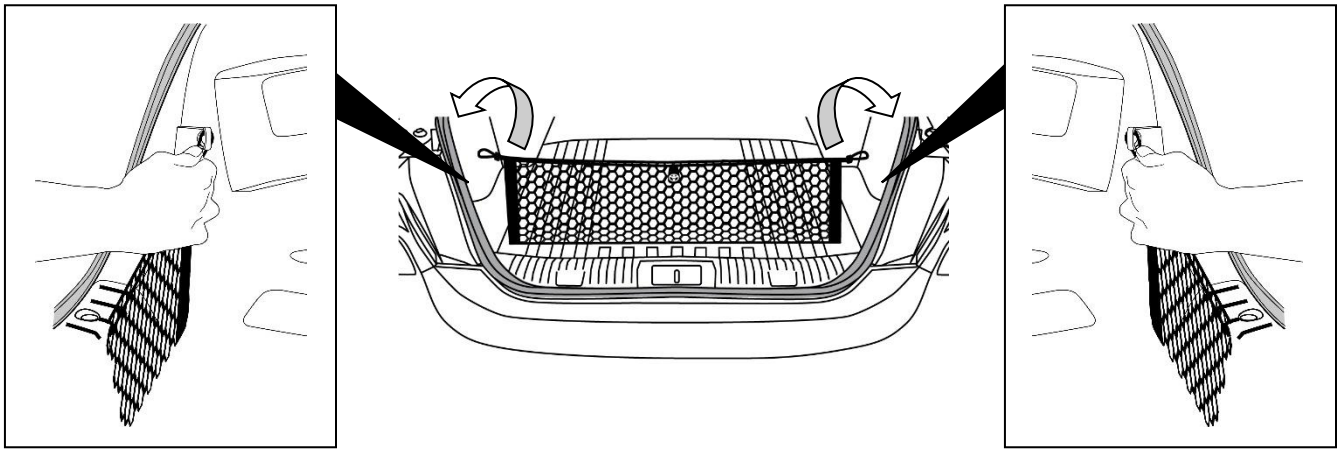

7

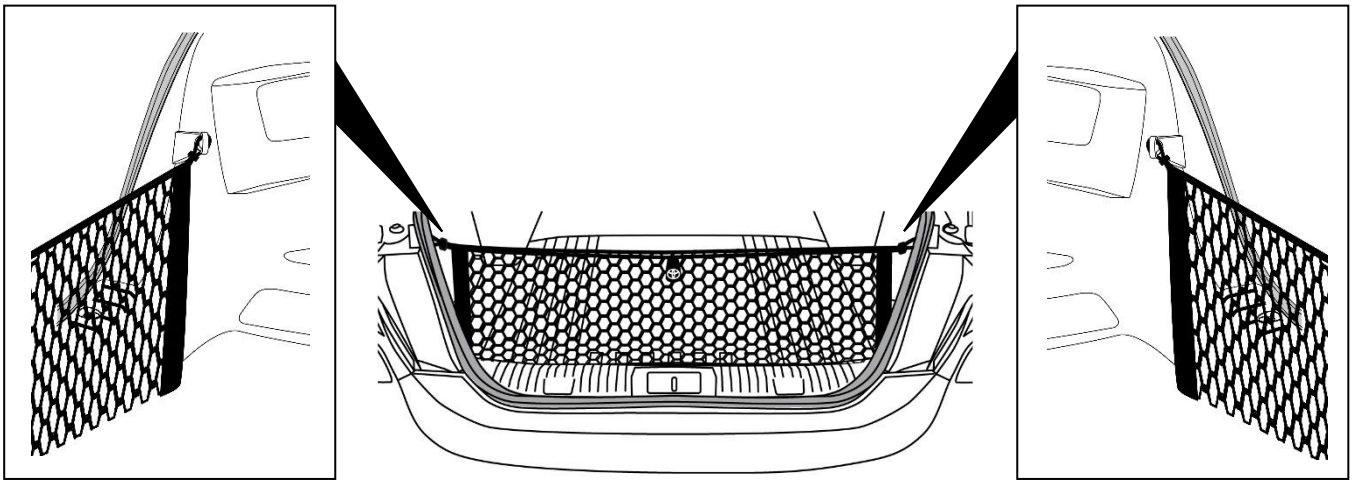

© 2025 Toyota Motor Sales, USA

Checklist - these points **MUST** be checked to ensure a quality installation.

Accessory Function Checks ☐ Confirm that the net is attached properly to the anchor points in the vehicle.	Confirm net handle is facing toward the rear of the vehicle. Confirm upper loops at the top of the net are attached to the upper T-Anchors of the vehicle.
Vehicle Function Checks ☐ Vehicle door operation	Confirm vehicle door opens and closes without interference from Cargo Net.
Vehicle Appearance Check ☐ After accessory installation and removal of protective cover(s), perform a visual inspection.	Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMNA Accessory Quality Shipping Standard.)

© 2025 Toyota Motor Sales, USA