Part Number: LEXUS WHEEL LOCK (NUT) PART NUMBERS

Kit Contents

Item #	Quantity Reqd.	Description
1	4	Wheel Lock
2	1	Key
3	1	Collaterals Plastic Poly Bag with Printed on Instructions, ID/Registration Card, Replacement Key Order Form/Envelope, Cable Tie (Bulk P/N Only)

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1	1	Port Brochure P/N: 00276-00890 (cable tie, plastic poly bag, ID card, instructions, etc.) **NOTE:** Only required if port is receiving Wheel Locks in single kit packaging instead of bulk
2	1	Pouch MDC P/N: 00602-06999 (DIO)

Conflicts

None

Recommended Tools

Personal & Vehicle Protection	**Notes**
Safety Glasses	
Special Tools	**Notes**
None	
Installation Tools	**Notes**
Socket	21mm Deep Socket
Torque Wrench	Dial type or Digital
Wire Brush	
Special Chemicals	**Notes**
None	

General Applicability

See Vehicle Part Applicability matrix on Page 2.
Alloy Wheel with Flat-Seat Lug holes.

Recommended Sequence of Application

Item #	Accessory
1	
2	

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		

Legend

STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.

OPERATOR SAFETY: Use caution to avoid risk of injury.

CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.

REVISION MARK: This mark highlights a change in installation with respect to previous issue.

SAFETY TORQUE: This mark indicates that torque is related to safety.

REGULATORY MARK: This mark indicates the component is related to regulatory compliance





Vehicle Part Applicability

PART NUMBER	MODEL	MODEL YEAR(S)	FINISH	TORQUE	SOCKET
00276-00900	ES 300 H	2019-2025	Chrome	103 Nm (76 ft-lb)	21 mm
	ES 350	2019-2025		103 Nm (76 ft-lb)	21 mm
	UX 250H/300H	2022-2025		103 Nm (76 ft-lb)	21 mm
PK456-00J00	UX	2021	Black Chrome	103 Nm (76 ft-lb)	21 mm
	UX-H	2021		103 Nm (76 ft-lb)	21 mm
PT276-35200-02	ES 300 H	2022-2025	Black PVD	103 Nm (76 ft-lb)	21 mm
	ES 350	2021-2025		103 Nm (76 ft-lb)	21 mm
00276-00901	GX 460	2017-2023	Chrome	113 Nm (83 ft-lb)	21 mm
PT276-50180	LS	2021, 2023	Chrome	140 Nm (103 ft-lb)	21 mm
	LS-H	2021, 2023		140 Nm (103 ft-lb)	21 mm
	LX 600	2022-		131 Nm (97 ft-lb)	21 mm
	LX 700H	2025-		131 Nm (97 ft-lb)	21 mm
PT276-50190	LS	2021, 2023	Black Chrome	140 Nm (103 ft-lb)	21 mm
	LS-H	2021, 2023		140 Nm (103 ft-lb)	21 mm
	LX 570	2024		131 Nm (97 ft-lb)	21 mm
	LX 600	2022-		131 Nm (97 ft-lb)	21 mm
	LX 700H	2025-		131 Nm (97 ft-lb)	21 mm
	GX 550	2025-		131 Nm (97 ft-lb)	21 mm
PT276-50080	30 LC CV	2023	Chrome	140 Nm (103 ft-lb)	21 mm
	LC 500	2022-2023		140 Nm (103 ft-lb)	21 mm
PT276-11180	30 LC CV	2023	Black Chrome	140 Nm (103 ft-lb)	21 mm
	LC 500	2022-2023		140 Nm (103 ft-lb)	21 mm
PT276-34230-00	GX 550	2024-	Chrome	131 Nm (97 ft-lb)	21 mm
	TX 350, 500H, 550H PLUS	2024-		140 Nm (103 ft-lb)	21 mm
PT276-34231-02	TX 350, 500H, 550H PLUS	2024-	Black PVD	140 Nm (103 ft-lb)	21 mm
PT276-48191-00	ES 300H, ES BEV	2026-	Chrome	140 Nm (103 ft-lb)	21 mm

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.



Fig. 1-1

1. Remove One Lug Nut.

(a) Remove one lug nut from each wheel and discard them according to local scrap/recycle regulations (Fig. 1-1).

(b) If the studs are dirty, clean them with a wire brush prior to installing the wheel locks.

NOTE: Use safety glasses while using the wire brush.



Fig. 2-1

2. Install the Wheel Locks.

(a) By hand, install a wheel lock on each wheel (Fig. 2-1).

CAUTION: Do not use an impact wrench to install or remove the wheel locks.

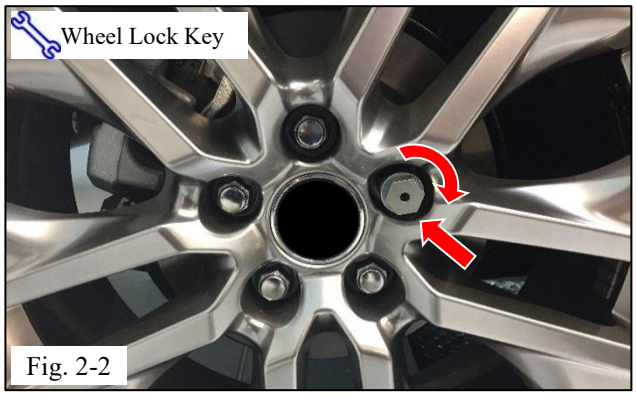


Fig. 2-2

(b) Take the key supplied in the wheel lock set and place it on top of the wheel lock. Turn it until the patterns engage (Fig. 2-2).

(c) Place the 21mm deep socket on top of the key.

(d) Use a torque wrench and apply pressure on the key to tighten the wheel locks to the specified torque listed in the table.

CAUTION: Do not use an impact wrench to install or remove the wheel locks.

Torque: Listed in Table

3. **Store Wheel Lock Key and Collaterals.**

(a) Scrap the wire tie given with the plastic poly bag and other collaterals.

(b) Place the wheel lock key and collaterals into the plastic poly bag and then into the vehicles' glove compartment.

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:	Look For:
Accessory Function Checks	
☐ Correct part number has been installed	Verify part number on package.
☐ Wheel lock tightness	Wheel locks have been installed at a torque listed in the table. Verify process only, check torque during installation.
☐ Wheel Lock Key Storage	Verify associated wheel lock key and collaterals are placed into vehicle glove compartment in plastic poly bag.
☐ Wheel Lock information packet (papers)	
Vehicle Appearance Check	
☐ After accessory installation and removal of protective cover(s), perform a visual inspection.	Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMNA Accessory Quality Shipping Standard.)