TOYOTA RAV4 HEV/PHEV 2026 - CONSOLE SAFE

Preparation

Part Number: PT972-42260

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Console Safe
2	1	Felt Foam Pad
3	1	Lock Instructions
4	1	Combination Reminder Sticker
5	1	Red Hang Tag
6	1	Set of Tubular Keys

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1	4	10mm M6 Bolts

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1		
2		
3		

Conflicts

None

Recommended Tools

Personal & Vehicle Protection	**Notes**
Special Tools	**Notes**
Installation Tools	**Notes**
Socket	10mm
Extension	12”
Ratchet	3/8” Drive
Torque Wrench	9 Nm (80 in-lbs)
Special Chemicals	**Notes**

General Applicability

MY26 and newer RAV4

Recommended Sequence of Application

Item #	Accessory
1	
2	
3	

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1	1	Vault Interior Pad
2	1	Combination Lock
3		

Legend

STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.

OPERATOR SAFETY: Use caution to avoid risk of injury.

CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.

REVISION MARK: This mark highlights a change in installation with respect to previous issue.

SAFETY TORQUE: This mark indicates that torque is related to safety.

REGULATORY MARK: This mark indicates the component is related to regulatory compliance

Issue: B 12/22/2025

TOYOTA RAV4 HEV/PHEV 2026 - CONSOLE SAFE

Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).
-

Please see your Toyota dealer for a copy of this document.

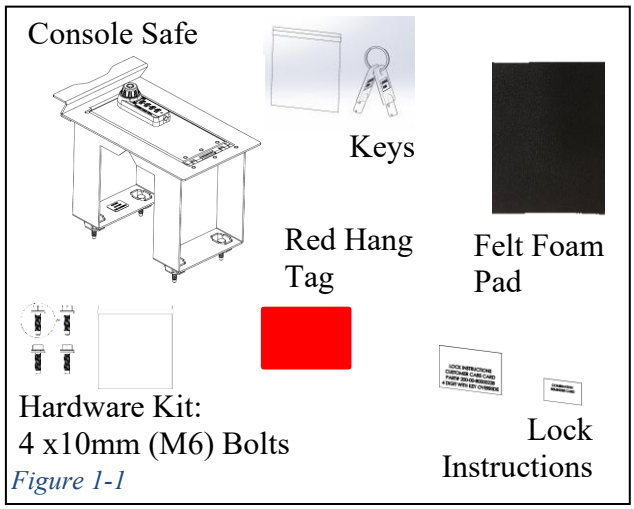


Figure 1-1


Figure 2-1

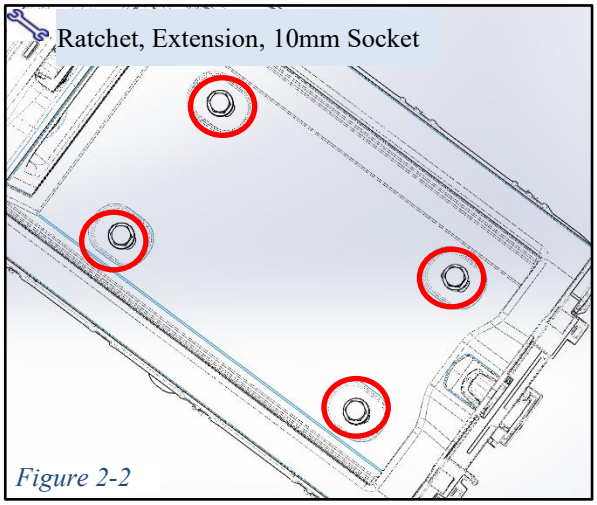


Figure 2-2

1. **Prepare the Vehicle for Safe Installation**
   a. Verify the kit contents (*Figure 1-1*).
   b. Note: Ensure the felt mat is removed from the packaging. **Do not discard**. It is sandwiched between two cardboard pieces at the “top” of the open carton. Also, set aside the polybags containing the lock instruction kit and tubular keys.
   c. Remove the original center console mat and discard. Remove any other center console contents.
2. **Remove Factory Mounting Hardware**
   a. Remove the OE center console lid by pressing both buttons together and lifting upwards. The buttons are in the circled areas as shown in Figure 2-1.
   b. Remove the (4) factory mounting screws from the bottom of the OE center console and discard (*Figure 2-2)*.

Issue: B 12/22/2025

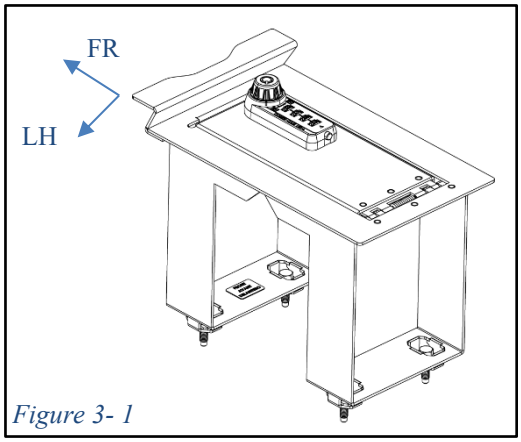


Figure 3- 1

3. Install Console Safe into Center Console

a. Open the console safe lid and lower the safe into the center console starting with the back side. Lower the console safe at an angle until flush with the center console. NOTE: A "front" sticker is present on the forward leg (*Figure 3-1*).

b. Press down on the top frame at the front and back simutaneously, to ensure the frame is fully seated on the legs.

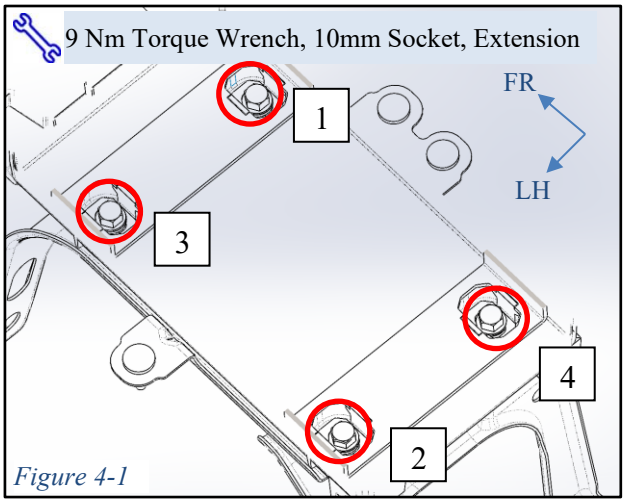


Figure 4-1

4. Tighten the Console Safe in Position

a. Place (4) bolts supplied in the hardware kit into each of the (4) OE center console holes and tighten to 9 Nm (79.5 in-lbs). Tighten in order 1-4 as shown (*Figure 4-1*).

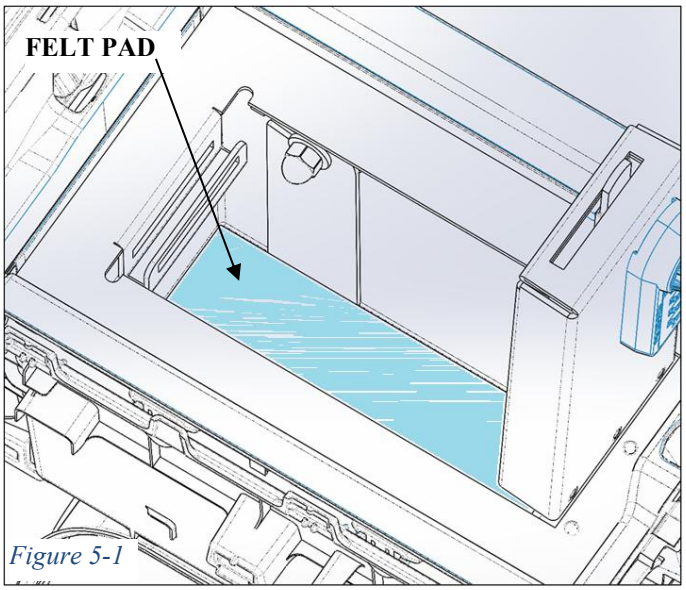


Figure 5-1

5. Placement of the Mat, Instructions, and keys

a. In part packaging, remove:
   i. Felt Foam Pad
   ii. Poly bag with customer lock instructions
   iii. Tubular Key Set

b. Place pad at the bottom of console safe ensuring the felt side is facing upwards (*Figure 5-1*).

c. Place the polybag with lock instructions, combination reminder sticker, and polybag containing the key set and place into the glovebox.

d. Close console safe lid and put safe in locked position by turning knob clockwise.

e. Ensure the lock combination reads 0-0-0-0 and red hang tag is in place around the lock.

f. Replace the center console lid by engaging the rear position into the center console, and pushing the front down in the center console. Ensure the soft pad of the center console lid is upwards. Ensure red hang tag is in place.

TOYOTA RAV4 HEV/PHEV 2026 - CONSOLE SAFE

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:	Look For:
Accessory Function Checks ☐ Check lock combination ☐ Confirm lock is in locked position ☐ Verify felt pad ☐ Polybag w/ lock instructions and combination sticker, as well as polybag w/ keys are in the glovebox.	Combination lock shows 0-0-0-0. Visually confirm the felt pad is on bottom of safe. Visually confirm 2 polybags are in glovebox. Confirm red hang tag presence.
Vehicle Function Checks ☐ Replace / Close Console Lid	The OE center console lid is replaced with soft pad upwards. The lid of center console closes without interference to console safe. The lid of console safe does not interfere with center console lid when in open position.
Vehicle Appearance Check ☐ After accessory installation and removal of protective cover(s), perform a visual inspection.	Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)

Issue: B 12/22/2025